

## *Generic: Why can't I boot past the messages "loading ramdisk...." or "loading kernel...."?*

This is usually caused by an old, non-standard or buggy BIOS. You can try to get around this by re-inserting the Freesco disk into the computer you made it in and running **safe\_fd.bat** (which comes with **freesco-027.zip**). This will rewrite the syslinux bootloader to an already created Freesco disk, but in "safe mode".

This may allow Freesco to boot on some machines that it couldn't before but it will, however, boot slower.

*Unique solution ID: #1176*

*Author: Mathieu CATTIN*

*Last update: 2005-03-26 00:12*